

coffee wakes up the world



User Manual



Coffee machine

bistro!

English

01.00.001

Congratulations on the purchase of your WMF coffee machine

You will be impressed by technical design, durability, economy of use and, first and foremost, the quality of the coffee.

The WMF bistro! coffee machine is a fully automatic single-cup machine for espresso, café crème, cappuccino, latte macchiato, milk coffee, foamed milk and hot water. With its optionally available choc hopper, the bistro! can also make hot chocolate with milk or milk foam.

Each beverage is freshly brewed at the press of a button which guarantees a high quality beverage. Operator control of the machine is possible via a graphic touch-pad display. Up to eight beverage buttons are available on the operating panel. The beverage buttons can be allocated on two levels and have a lettering space. Additional function keys are allocated depending on the machine configuration.

Keep these instructions near the coffee machine so that you and your operating staff have the right information handy and can take the correct action in the event of any technical problems arising.

The maintenance concept for the machine is designed for preparation of 60,000 coffee servings and 6,000 chocolate beverages per year. Customer check-up is required after a maximum of 6 months and maintenance is planned after each 30,000 brewings. Alternative maintenance concepts for higher brewing rates can be agreed upon individually.



Please read the user manual prior to using the coffee machine!

Ensure staff have access to the user manual!

*Important! Chapter 1 Introduction
User Manual Signs and Symbols
see chapter Safety!*



In the event of failure to comply with maintenance information (see chapter Maintenance), no liability is accepted for any resultant damage.

Similarly all guarantee/warranty obligations cease to apply in such cases.

Chapter 1	Introduction	6
1.1	Designation of coffee machine parts	6
	Signs and symbols used in the user manual	8
	Glossary	9
Chapter 2	Operation	10
2.1	Switch on coffee machine	10
2.2	Dispense beverages	10
2.3	Multiple preselection	10
2.4	Shift button (optional)	11
	Special button (optional)	11
2.5	Dispense milk or milk foam	11
2.6	Dispense Hot water	11
2.7	Connect up the milk	12
2.7.1	Standard	12
2.7.2	WMF Cooler, WMF Cup&Cool (optional)	12
2.8	Dispense Steam (optional)	13
	Warm beverages	13
	Foam milk	13
2.9	Steampower (optional)	14
	Heat milk:	14
	Foaming milk:	14
2.10	Height adjustment of the combi spout	14
2.11	Bean hopper/product hopper	14
2.12	Manual insert	15
2.13	Coffee grounds container	15
2.14	Grounds disposal through the counter (optional)	16
2.15	Drip tray	16
2.16	Switch off the coffee machine	16
Chapter 3	Software	17
3.1	An overview	17
3.2	Ready to operate display	19
3.2.1	Ready to operate display	19
	Standard display for normal operation	19
	Standard display for SB mode (self-service)	19
3.2.2	Warm rinsing	19
3.2.3	Barista pad	19
3.2.4	Information	20
	Service	20
	Customer care	20
	Brew time	20
	Journal	20
	Timer	20
3.2.5	To main menu	21


Table of Contents

3.3	Main menu	21
3.3.1	Milk and foam	21
	Milk foam quality	21
	Latte macchiato pause interval	21
3.3.2	Timer program	22
	Timer status	22
	Set timer	22
	Copy Day	23
	Timer overview	24
	Timer delete	24
	Timer info	24
3.3.3	Customer care	25
	Cleaning program	25
	Milk system	26
	Choc system (mixer rinsing) (optional)	26
	Filter change (optional)	26
	Customer check-up (optional)	26
3.3.4	Settings	27
	Recipe and beverage buttons	27
	Cup volumes	27
	Change recipes	27
	Sequence of ingredients additions	29
	Button allocation	29
	Testing	30
	Weigh grounds	
	Quality check	
	Reset	30
	Time/date	30
	Language	30
	Display contrast	30
	Scale filter	30
	Capacity	31
	Warm-up rinsing	31
	SB operation (self-service)	31
	Foamer rinsing	31
	Rinsing interval	31
	Operating options	32
	Illumination (optional)	32
3.3.5	Enter PIN	33
3.3.6	PIN rights access control	33
	Level: Cleaning	33
	Level: setting	33
	Level: Accounting	34
	Delete PIN	34
3.3.7	Accounting: numbers of items	35
3.3.8	Waiter accounting system (optional)	35

Chapter 4	Other settings	36
4.1	Set pinch valve	36
4.2	Labelling of beverage buttons	36
Chapter 5	Customer care	37
5.1	Cleaning program	38
5.2	Milk system cleaning	38
	Standard	38
	Plug&Clean	38
5.3	Choc system rinsing	39
5.4	General cleaning	39
5.5	Choc mixer cleaning (optional)	39
5.6	Steam outlet cleaning (Standard and Steampower)	40
5.7	Foils for bean hopper cleaning	41
5.8	Cleaning the choc product hopper (optional)	42
Chapter 6	HACCP cleaning schedule	43
Chapter 7	Maintenance	45
7.1	Customer Check-up	45
7.2	Maintenance	45
7.3	Mixer	45
7.4	WMF Service.	45
Chapter 8	Messages and instructions	46
8.1	Messages for operation	46
8.2	Error messages/malfunctions	47
8.3	Error without error display	50
Chapter 9	Safety	51
9.1	Hazard to the operator	51
9.2	Hazard to the coffee machine	52
9.3	Duties of the owner/operator	53
9.4	Warranty claims	54
	No warranty is provided:	54
Annex A: Quick reference "cleaning"		56
Annex B: Technical data		58
Technical data coffee machine		58
Conditions for usage and installation		58
Annex C: Accessories and spare parts		60
Index		62

Chapter 1 Introduction

1.1 Designation of coffee machine parts

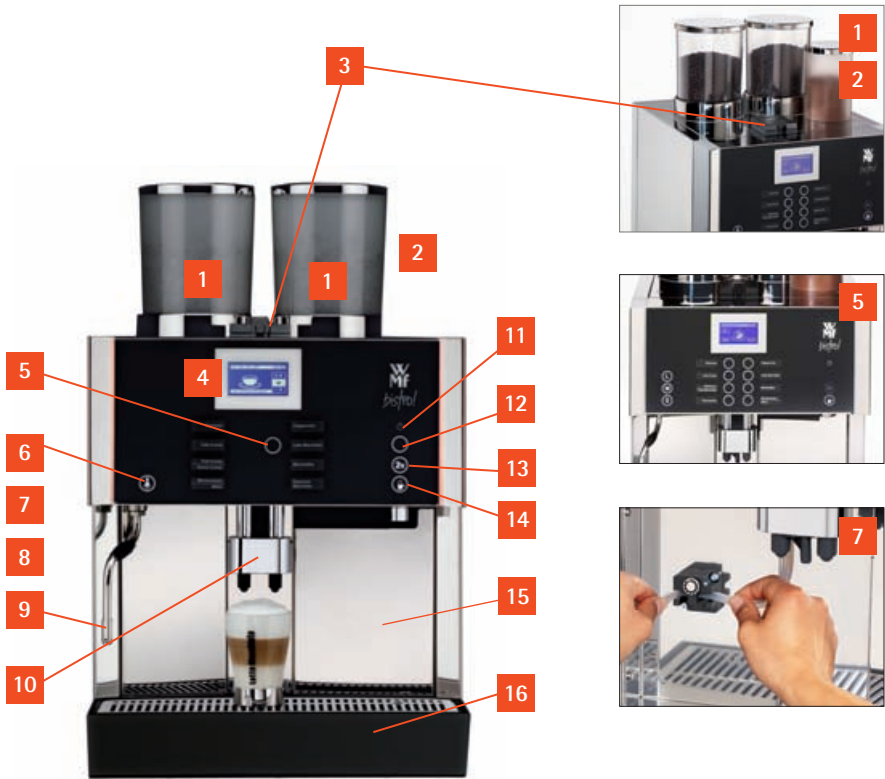

Display for self-service operation







- 1** Bean hopper(s) (optionally 1 or 2, espresso on the left)
- 2** Choc container (optional)
- 3** Manual insert / Tablet insert
- 4** Touch-screen display
- 5** Beverage buttons *
- 6** Steam button* or special preselection buttons (optional)
- 7** Pinch valve (not in combination with Steampower)
- 8** Plug&Clean (optional)
- 9** Steam outlet Steampower (optional)
- 10** Height-adjustable combi spout with integral milk foamer
- 11** ON/OFF button
- 12** Decaf button **
- 13** Shift button **
- 14** Hot water button *
- 15** Coffee grounds container
- 16** Removable drip tray with drip plate (drip grid)
- 17** Warm up pad
- 18** Barista pad
- 19** Timer and clock display
- 20** Info pad
- 21** Messages/error messages
- 22** Menu pad (opens main menu)

* Standard allocation

** Alternative key allocation

Signs and symbols used in the user manual

For a detailed description of the warnings, see chapter "Safety"!

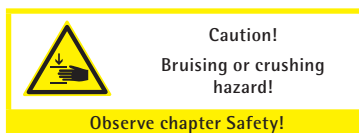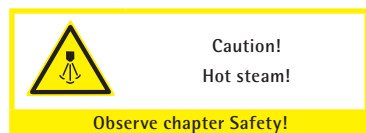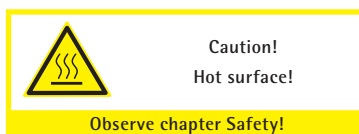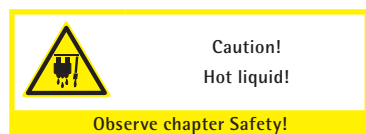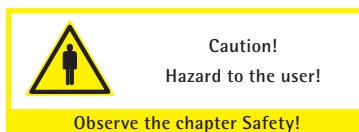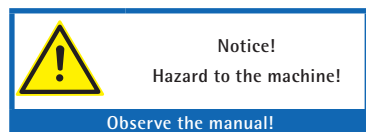

Instruction



Cross reference



Start position
Main menu



Very important!
Ensure to observe!

If the menu symbol is shown in this user manual the description starts at the start position.

Call up the main menu:

※ Touch on pad **MENUE**

The main menu is displayed.

*There are other display options;
see chapter "Main menu".*




Main menu

Glossary

Term	Declaration
•	• Listings, selection options
※	※ Individual steps
<i>Text in italics</i>	<i>Description of coffee machine state and/or explanations of automatic steps</i>
sec	Seconds
min	Minutes
Barista	Professional coffee server
Choc	Hot chocolate
Decaf	Decaffeinated coffee
Dispensing options	Start-Stop: Dispensing runs up to the set amount and can be stopped by pressing on the button again Free-flow: Dispensing runs for as long as the button is pressed Metered: the set amount is dispensed
Beverage dispensing	Dispensing of coffee, hot water or a choc beverage
Main tap	Water stop cock, angle valve
Carbonate hardness	Quoted in °dkH. The water hardness is a measure of the calcium dissolved in the water.
Milk system	Combi spout, milk nozzle and flexible milk hose.
Mixer system	Complete module, mixer with portion controller for choc
O-rings	Seals
Preinfusion	Prior to brewing, coffee is briefly infused in order to ensure a more intense release of its aromatic substances.
Pressing	Automatic pressing of coffee grounds prior to brewing
Operating range	For example: Performance of the calcium filter in litres of water it can filter
Grounds chute	See grounds disposal through counter Chapter 2.14
SB mode	Self-service
Rinsing	Intermediate cleansing
Additions	Components of a recipe for a beverage, for example apart from coffee, also milk, milk foam, choc.

Chapter 2 Operation

2.1 Switch on coffee machine

- * Press  ON/OFF button for longer than 2 seconds. Coffee machine switches on and heats up. When the machine is ready to dispense beverage, the Ready to operate display appears.

The machine can also be switched on using the timer.

2.2 Dispense beverages

Pressing the beverage button triggers dispensing of the beverage selected.

- Lit up button = Ready to dispense
- Flashing button = Dispense beverage
- Unlit button = not ready to dispense / button barred


- * Place a suitably sized beverage receptacle below the dispenser
 - * Press desired beverage button
- Desired beverage and progress of dispensing indicated on the display.*

2.3 Multiple preselection


After beginning brewing, the display will show a cup symbol during dispensing.

Preselection for multiple dispensing

Increase the preselection for a beverage:

- * Touch on the pad 

Reduce the preselection for a beverage:

- * Touch on the pad 

The display shows the current preselection and the number of beverages begun.

The multiple preselection for dispensing larger quantities, for example for a pot of coffee.



PIN protection see settings> operation options software chapter

Ready to operate display



Timer program see from page 21



Hot liquids in the dispensing area!

Observe the chapter Safety!



For button allocations see chapter "Settings" recipes and beverage buttons.



Displaying the multiple preselection:

The example shows 6 cafe cremes. Beverage 2 of 6 is currently being dispensed. Dispensing of a maximum of 12 times the single beverage is possible.



2.4 Shift button (optional)

Each beverages button may be doubly allocated.
Level 1 always active

※ Press on the Shift button

Level 2 activated

※ Press desired beverage button.

Level 1 is active again after dispensing a beverage at Level 2.



*Shift button (active/inactive)
see chapter on Setting > operating
options for software*

Special button (optional)

There are special buttons available on the control panel such as S, M, L or the Decaf button depending on the version.

These are preselection buttons which establish the desired amount of the beverage or preparation from the Decaf grinder before selection of the beverage using the beverage buttons.



2.5 Dispense milk or milk foam

※ Press on the beverage button allocated to milk or milk foam

Dispensing occurs according to the dispensing option which was set.

*See dispensing options
button allocation > setting
Free-flow, Start-Stop or metered*

2.6 Dispense Hot water

※ Press on the hot water button

Dispensing occurs according to the dispensing option.

Multiple preselection is possible for the dispensing option "metered".



*Volume preselection,
see chapter Volume preselection.*

2.7 Connect up the milk

- * Insert the milk nozzle into the milk connection on the combi spout

Use a suitable milk nozzle!

- green milk nozzle = with a refrigerator, milk temperature 4-6°C
- white milk nozzle = cooled milk
- brown milk nozzle = milk at room temperature
- blue milk nozzle = only for the option milk power



2.7.1 Standard

- * Open the milk packaging and place on the left next to the coffee machine
- * Lead the milk hose through the side wall and through the pinch valve
- * Insert the milk hose with the beige milk nozzle into the milk packaging

The hose must not be under tension for the height adjusted on the combi spout.




Adjusting the pinch valve, see chapter "Other settings"

2.7.2 WMF Cooler, WMF Cup&Cool (optional)

- * Pull out the milk container
- * Push the cover of the milk container back
- * Fill milk into the milk container
- * Place the cover back on the container
- * Insert the adapter on the milk hose into the connection in the milk cover
- * Push the milk container back in carefully



The beige milk nozzle on the milk hose is inserted into the adapter.

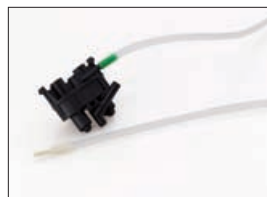

2.8 Dispense Steam (optional)

- * Press the steam button

Steam is dispensed for as long as the button is held pressed.

Steam

- warms beverages
- manually foams milk



Warm beverages

- * Use as tall and slim a cromargan jug as possible with handle
- * Fill jug to no more than half way
- * Immerse steam nozzle deeply into jug
- * Press and hold steam button until desired temperature is reached
- * Release steam button
- * Swing steam outlet over to the drip tray
- * Briefly press steam button

Residues in the steam outlet tube are rinsed out.

- * Wipe steam outlet with a damp cloth

*For example a cromargan jug,
WMF order code 06.3417.6040*

Foam milk

- * Use as tall and slim a cromargan jug as possible with handle
- * Fill jug to no more than half way
- * Immerse steam nozzle into jug to just under the surface
- * Press and hold steam button whilst rotating jug in a clockwise direction

A thick creamy milk froth results.

- * Release steam button
- * Swing steam outlet over to the drip tray
- * Briefly press steam button

Residues in the steam outlet tube are rinsed out.

- * Wipe steam outlet with a damp cloth



Do not overheat milk when foaming, otherwise foam volume decreases.

2.9 Steampower (optional)

Foam or milk are automatically heated or heated and foamed up.

Heat milk:

- * Fill 200 to 500 ml into a slim, tall jug
Fill jug to no more than half way.
- * Immerse steam nozzle deeply into jug
- * Press milk button
The milk is automatically heated.



Foaming milk:

- * Fill 200 to 500 ml into a slim, tall jug
Fill jug to no more than half way.
- * Immerse steam nozzle deeply into jug
- * Press foam button
The milk will be heated automatically and foamed at the same time. Steam dispensing ends after reaching the set temperature or after renewed pressing of the beverages button.



Setting the temperature, see chapter "Settings", change recipes

2.10 Height adjustment of the combi spout

The combi spout height is adjustable.

To adjust height:

- * Take hold of the combi spout from the front and push to the desired height



Combi spout clearance height range: 60 - 170 mm

2.11 Bean hopper/product hopper

Fill the hopper to a maximum of the amount needed for one day to maintain the freshness of the products.



Espresso beans on the left

2.12 Manual insert

The manual insert is located at the front in the centre of the coffee machine lid.

Manual insert is used:

- to insert cleaning tablets
- when using an additional coffee variety, for example decaffeinated coffee
- for a coffee trial

Preparation of coffee grounds over the manual insert

- * Open manual insert lid
- * Insert coffee grounds (max. 16 g)
- * Close manual insert lid
- * Select the desired beverage



Only put in the coffee grounds or cleaning tablet after instructions to do so are shown on the display.



2.13 Coffee grounds container

The coffee grounds container receives the used coffee grounds. It has the capacity to receive coffee grounds for approx. 70 brewings.

The display shows a message as soon as the coffee grounds container needs to be emptied.

Beverage dispensing is blocked for as long as the coffee grounds container is removed.

- * Pull out coffee grounds container.
- * Empty and replace coffee grounds container
- * Acknowledge procedure on the display

 


If coffee grounds container cannot be inserted, check chute for coffee residues and remove them.



Always empty coffee grounds container before reinserting! Replacing without emptying results in the coffee grounds container being overfilled. The coffee machine will be soiled. This may cause subsequent damage to the machine.

If this is not observed, the warranty is invalidated in the event of any resultant damage.



2.14 Grounds disposal through the counter (optional)

The coffee machine can be fitted with a counter-fitting coffee grounds container. Both the coffee grounds container and the coffee machine base have an opening in them, in this case, which passes through the counter the machine is placed on. The spent coffee grounds are collected in a large reservoir under the counter.



*Clean coffee grounds chute daily!
see chapter "Care".*

2.15 Drip tray

For coffee machines with a drain connection, the drip tray must be emptied regularly.

- * Pull out the drip tray carefully and empty
- * Insert the drip tray



*Clean drip tray daily!
see chapter "Care"*

Insert again carefully so that no unintentional dripping of water occurs.




**Hot liquids in the
dispensing area!**

Observe the chapter Safety!

2.16 Switch off the coffee machine

Daily cleaning must be carried out prior to switching off the coffee machine.

- * Press the  ON/OFF button until the coffee machine switches off
- * Remove mains plug!
- * Turn off mains water tap



*PIN protection
see chapter "Settings"
> operation options*

If this is not observed, the warranty is invalidated in the event of any resultant damage.



Observe the manual!

Observe the chapter Warranty!

Chapter 3 Software

3.1 An overview

Ready to operate display





* Touch clear pad on ready to operate display.
Additional pads are activated.



There are various options for the ready to operate display.
See "Ready to operate display" for further options



If there are errors, pad  is displayed!

If cleaning  is required then a care message pad is displayed!

Pads on the ready to operate display

Chapter 3.2



Warm rinsing
Chapter 3.2.2



Barista (strength of the coffee)
Chapter 3.2.3



Information
Chapter 3.2.4



Main menu
Chapter 3.2.5










Error message
Touching the pad calls up the error message.













Care message
Touching the pad leads directly into the menu.

*Self-service and
operating options,
see chapter "Settings"*

Functions main menu (pads) *Chapter 3.3*

	Milk and foam <i>Chapter 3.3.1</i>
	Timer <i>Chapter 3.3.2</i>
	Customer care <i>Chapter 3.3.3</i>
	Settings <i>Chapter 3.3.4</i>
	Entering a PIN <i>Chapter 3.3.5</i>
	PIN access control <i>Chapter 3.3.6</i>
	Accounting <i>Chapter 3.3.7</i>

Menu control pads

	Saving settings
	Starting or confirming a step
	
	Back to the higher menu level Abort/leave without saving (Exit)
	Clear or reset
	Start test brew grounds check
	Increase and reduce settings values
	
	Forward or back one step in listings
	

3.2 Ready to operate display


3.2.1 Ready to operate display

Standard display for normal operation

- Warm rinsing
- Barista pad
- Menu
- Information



Standard display for SB mode (self-service)

All pads which allow changes to be made are not available. The warm rinse pad, Barista pad, menu pad and messages are inactive. Error messages are not shown, only the Caution symbol  is shown.



3.2.2 Warm rinsing

Touch the warm rinsing pad .

Rinsing of the pipes with hot water begins. The water warms the brewing system and guarantees an optimum coffee temperature.

Recommended after a longer brewing pause, especially before dispensing a cup of espresso.

Warm rinse pad (active/inactive) see chapter "Settings" > operating options

3.2.3 Barista pad

✱ Touch the Barista pad .

The coffee strength will be altered once for the next brew.

weaker (-15%)



normal, as per setting



stronger (+15%)



Barista pad (active/inactive) see chapter "Settings" > operating options

3.2.4 Information


* Touch on pad  on the display

The menu Information appears.

The main "Information" menu contains the following selection options:

Service

- Service
- Next date for maintenance
- Commissioning data
- Software versions

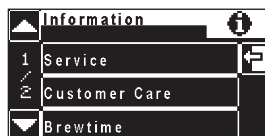

Customer care


- Journal
Journal of last cleaning
- Information about cleaning
Period since the last cleaning
- If no beverages were dispensed since the last cleaning,
"OK" is indicated.
- Information about maintenance
Information about the remaining period and brews until
the next maintenance dates
- Information about the scale filter (optional)
Information about the remaining capacity and period
until filter change is needed

Brew time

- Brew time of last beverage dispensed

Journal

- List of recorded errors and messages.
(for the telephone support team)

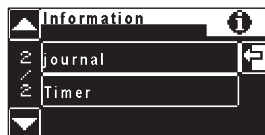

Timer

- Display of the timer status (On/Off)
- Display of the next switching time

3.2.5 To main menu

Access to main menu:

※ Press on the ready to operate display on **MENUE**

Main menu is displayed.



 
Ready to operate display



... with additional pads

Delayed fading in, see chapter "Settings" > operating options

3.3 Main menu



see chapter PIN access control pictures of the main menu for protected levels.

3.3.1 Milk and foam

Milk foam quality

The milk foam quality is set here.
This setting will apply to all beverages with milk foam.
Variations in milk characteristics are compensated for.
Reduce setting value -> finer
Increase setting value -> coarser



Foam Quality

Latte macchiato pause interval

Latte macchiato is more successful if the interval between milk and milk foam dispensing is lengthened. The standard setting is 3 seconds.
Reduce value -> shorter interval
Increase value -> longer interval



macch.interrupt



3.3.2 Timer program

The timer program sets on/off times.

The main "Timer Program" menu contains the following selection options:

- Timer state
- Set timer
- Timer overview
- Timer delete
- Timer info



Timer status

* Touch on the pad **Timer Status**
Activate/deactivate timer.



When the timer is activated the timer symbol, a little clock, appears on the display.


Set timer

* Touch on the pad **Timeradjustment**
Program the switching on and switching off times.

* Touch on the pad **Running Time**
The running time display appears. Here the day, time and desired operation is set.



An example

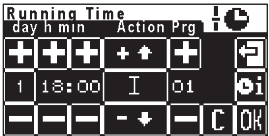

In day 1-5 or day 1-7, the switching times are copied on the indicated days.

Desired settings with the pads:

- **+** and **-**

Updated selection is inversely displayed!

- * Set day (Day).
 - 1 = Monday
 - 2 = Tuesday, etc. up to 7 = Sunday
 - 1-5 = Monday to Friday (weekdays)
 - 1-7 = Entire week (Monday to Sunday)

* Set the time: (hours, minutes)
Set desired on/off times..

- * Set the desired switching time (action)
 - Switching on time = (on display)
 - Switching off time = (on display)
- * Confirm with

Display programmed switching times:

- * Touch on the pad

Programmed switching times are displayed here. Up to 16 switching times (events) per day are possible.

Programmed times are listed chronologically.

Any new switching time is sorted chronologically immediately upon input and confirmation with .

- * Touch on the pad accesses directly the timer overview.

Copy Day

Any day may be copied complete with its switching times/events to other days.

- * Touch

Program the switching on and switching off times.
- * Touch
- * Touch number pad under

Day of the week selection is again displayed.
- * Scroll through to page 4
- * Touch

Day of the week selection is again displayed.
- * Select the day that you want to copy
- * Touch
- * Select the day you want to copy the time settings to

The day is copied.

In day 1-5 or day 1-7, the switching times are copied on the indicated days.

The individual days 1,2,3 ... 7 are displayed 7.



To check times see Timer overview.




Timer overview

Checking the programmed switching times:

- * Touch **Timer overview**

The week overview is displayed graphically. Operating times are indicated by white bars.

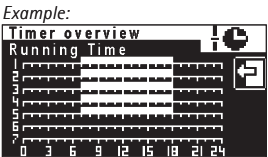

Example:
Timer events Monday to Friday (1-5).
On time 7:00 hrs Off time 18:00 hrs

Timer delete

- * Touch **Delete Timer** on page 2 of the timer main program menu.
- * Scroll to desired day and touch to select.
A security dialogue now appears querying whether deletion is actually intended .
- * Confirm with **OK**
The day is deleted with all its timer events.




This action cannot be undone.

Timer info

Touch **Timer Info**

A display with the next timer event accesses.

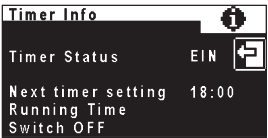



3.3.3 Customer care

Cleaning programs are started from the Care main menu.

The Care main menu contains the following selection options:

- Cleaning program
- Milk system
- Choc system
- Filter change (optional)
- Customer care (optional)

Cleaning program

※ Touch **Cleaning prog.**

The daily cleaning program starts.

The program automatically executes milk system rinsing if milky beverages have been dispensed beforehand. If there is a choc system installed (mixer system) then choc system rinsing occurs.

The cleaning program sequence is described in "Quick reference cleaning".

Observe the warnings in the chapter "Safety" before performing cleaning. The Quick reference cleaning and the chapter "Care" can be read from page 36.

 


For display guided processes see chapter "Software" care.

For general cleaning see chapter "Care".



For instructions see "Quick reference for cleaning".






Milk system

See "Quick reference cleaning" for milk system rinsing.

During milk system cleaning the milk system is flushed out using clear water. Using the option Plug&Clean the milk system cleaning is executed automatically.

 Milk system rinsing is performed automatically by the cleaning program.




Choc system (mixer rinsing) (optional)

See "Quick reference cleaning" for choc system rinsing.

During choc system cleaning the mixer system is rinsed out using hot water.

 Choc system rinsing is performed automatically by the cleaning program when a choc system is installed.



Filter change (optional)

This point can be selected by trained personnel if the function WMF Service has been enabled.

Question: Was the filter changed?

Yes/No

Customer check-up (optional)

This point can be selected by trained personnel if the function WMF Service has been enabled.

Question: Has customer check-up been performed?

Yes/No

3.3.4 Settings

Recipe and beverage buttons

* Touch **Recipes**

Menu **Recipes** shows the options:

- Cup volumes
- Change recipes
- Sequence of adding ingredients
- Button allocation
- Testing
- Extended

Cup volumes

Cup volumes are matched to the cups used.
Individual beverage ingredients are matched to the new cup volumes with no effect on composition and quality.

- * Touch the beverage button for the desired beverage.
- * Adjust cup volumes with the **+** and **-**
- * Save with **OK**


Change recipes

All beverages:

- Ground coffee quantity / Choc powder quantity
- Water volume

Milk beverages:

- Milk foam volume
- Milk volume

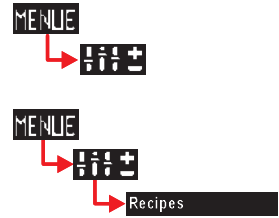

+ = more

- = less


= leave without change

OK = Save the values

Test = Start test



Change recipes

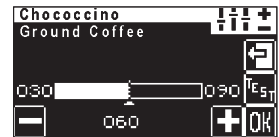

Example: Ground coffee quantityF



Coffee beverages:

Quality

The quality levels influence the coffee brewing. The higher the quality level the more intensive the release of the taste and aromatic substances in the coffee.

Quality 1 After pressing the coffee grounds space is made for swelling.

Quality 2 After pressing the coffee it is immediately brewed.

Quality 3 After pressing a pre-infusion occurs.

Quality 4 After pressing and a pre-infusion, a second wet pressing occurs.

Quality 5 As for Quality 4 but with stronger wet pressing

Temperature

The brewing temperature can be set to obtain an optimal coffee taste.

Each beverage button separately, up to 2 stages higher and up to 2 stages lower. 1 stage represents about 2°C.

(Default value is 94°C)

With Steampower (optional)

Set temperature of milk/milk foam 

Set foam quality 



An excessively high quality setting may lead to a brew water error. (error F161)



Sequence of ingredients additions

The sequence of additions is only possible for beverages whose recipe contains at least two ingredients.

The sequence in which the individual additions will be dispensed.

Adjustable additions:

- Coffee
- Milk
- Milk foam
- Choc

Set the sequence:

- Upper line: Set start position for dispensing milk, milk foam or choc.
- Lower line: Set start position for coffee brewing

- * Touch the start position pad until the desired addition is shown

*The next addition will be shown each time it is touched.
Sequence of dispensing from left to right.*

Button allocation

The beverages are allocated to the beverage buttons.
This button allocation is set here.

- * Press beverage button
- * Select the desired recipe, for example that for Espresso, from the list

Alter dispensing option for milk, foam, steam or hot water:


- * Press beverage button
- * Select recipe, for example foam
- * Select dispensing option

Select grinder for a coffee beverage:

- * Press beverage button
- * Select recipe, for example Espresso
- * Select grinder (on the right or left)

Sequence examples

First coffee and milk foam at the same time and then milk

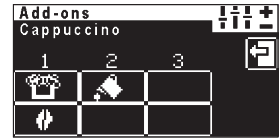

First milk foam, then milk, then coffee





First milk, then milk foam, then coffee



Load a new recipe:

the previous settings will be overwritten by the works standard values for the new recipe.

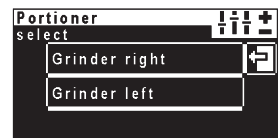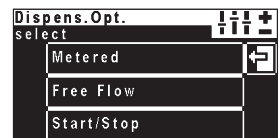



Testing

Weigh grounds

Weigh grounds Process dispenses ground coffee directly into the grounds container. The grounds may then be weighed.

Empty grounds container prior to this procedure!
The grinding procedure is performed three times. The amount weighed must be divided into three.



Quality check

The components of a beverage are delivered individually (coffee, milk, milk foam, choc).

The volumes of the individual components can be determined exactly.

Reset

The coffee machine software is restarted..

Time/date

Set the time and date here.

Language

Set the language of the display guide here.

Display contrast

Set the display contrast here.


(Default value is 70)

Scale filter

Query just regarding whether the WMF Service is enabled!

Set here whether a scale filter is fitted or not.


This affects the descaling intervals.

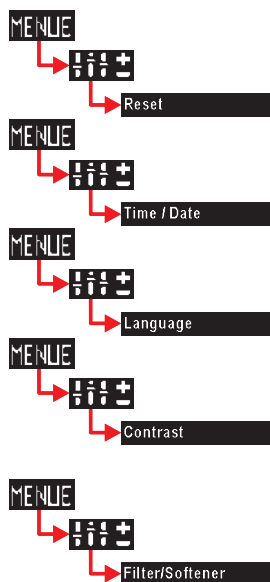

Capacity

If there is a scale filter fitted: Set the capacity of the scale filter here.

 (The scale filter capacity can be found in the scale filter documentation.)



Setting the scale filter and capacity; only possible if enabled by the WMF Service team.

Warm-up rinsing

Enter here the setting stating whether the coffee machine should rinse out the brewing unit with hot water after heating up.

Recommended setting: active.

 


SB operation (self-service)

(active/inactive, default value: inactive)

SB mode active:

- No manual insert (only cleaning tablets)
- No beverage preselection possible
- Menu pad delayed
- Maintenance and error messages suppressed
- Barista pad and hot rinsing pad not displayed



Foamer rinsing

Automatic foamer rinsing after the last beverage dispensing with milk components.

Yes/No



Rinsing interval

The time elapsed between the last removal of a beverage with milk in it and a foamer rinsing. Maximum value with Plug&Clean is 3 minutes.

Recommended setting: 2 minutes .



Operating options

The following operating options are available.

- Warm up button (active/inactive)
- Barista pad (active/inactive)
- 2. Level, Shift button (active/inactive)
- ON/OFF button (direct/via PIN)

Warm rinse pad

Recommendation for self-service: inactive.

Barista pad

Recommendation for self-service: inactive.

Shift button

Recommendation for self-service: inactive.

ON/OFF button

Recommendation for self-service: via PIN.

If "via PIN " is set then the PIN for the cleaning level will be queried on switching on or off.

Menu pad

Recommendation for self-service: delayed

Default: immediately

Illumination (optional)

Set the colour values here of the LEDs for the desired illumination colour.


Example settings	red	green	blue
permanent colour change	1	0	0
amber	25	30	0
blue	0	0	30




If customers serve themselves then some functions can be switched to inactive. The inactivated pads will not be shown on the ready to operate display

See PIN Rights access in the chapter Software

See PIN Rights access in the chapter Software

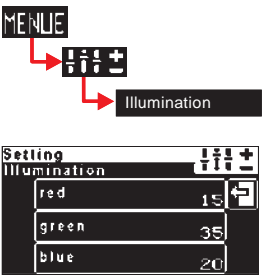

3.3.5 Enter PIN


Individual authorisation levels can be protected using a PIN. For access to a PIN-protected level, the PIN must be entered via pad .

* Touch  in the main menu.
Numerical keyboard display appears.

* Enter required 4-figure PIN

* Confirm with 

Following entry of a valid PIN, the assigned functions are available.

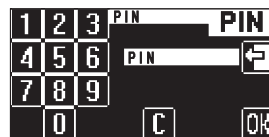





PIN-entry display

3.3.6 PIN rights access control

If a PIN has been assigned for a particular level no access will be granted without a PIN.

Level: Cleaning

On entering the valid PIN access to:






-  = Set milk foam quality
-  = Timer program
-  = Customer care
-  = PIN-protected ON/OFF button



Cleaning level access

Level: setting

On entering the valid PIN access to:

-  = Set milk foam quality
-  = Timer program
-  = Customer care
-  = PIN-protected ON/OFF button
-  = Settings (beverage, general, others)









Setting level access



Level: Accounting

On entering the valid PIN access to:

-  = Set milk foam quality
-  = Timer program
-  = Customer care
-  = PIN-protected ON/OFF button
-  = Settings (beverage, general, others)
- PIN** = Assign PIN rights, award access control
-  = Accounting of numbers of items

A PIN can be assigned to any level.

The levels are hierarchical.

Example: The PIN for level **Setting** is valid for levels **Cleaning** and **Setting**, but not for level **Accounting**.

- * Touch **PIN** in the main menu.
- * Select desired level

Example: **Cleaning**

Numerical keyboard display appears.

- * Enter desired 4-figure number

Number entered is displayed.

- * Confirm with **OK**

This level is now PIN-protected.

When a PIN is assigned to a subordinate level that PIN is automatically assumed for superior levels if the latter are not already PIN-protected.

Delete PIN

Entering 0000 will delete access control for the given level.

Deletion of one level automatically deletes the subordinate levels.




Accounting level access

An example:


PIN entry for the cleaning level:
1234.

This PIN is adopted in the superior levels.

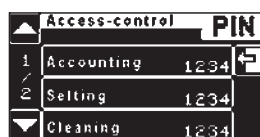

Example:

PIN entry for the
cleaning level: 1234,
set level: 9876,
set level: 9876,
account level: 7777

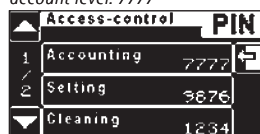

-  = more
-  = less
-  = leave without change
- OK** = Save the values
- C** = delete

3.3.7 Accounting: numbers of items

The day counter menu displays the counter for each beverage.



Read counter:

※ Touch desired beverage on the display.

Delete counter:

※ Touch on clear pad **C**

If no beverage is selected, a dialogue appears on the display on touching the clear pad **C** querying whether the counter readings for all drinks should be set to zero.

The "Accounting: numbers of items" function should be protected with a PIN to prevent unauthorised access.



Function over additional PIN (setting by service personnel):
Only possible to view the day counter, not to delete it.

3.3.8 Waiter accounting system (optional)

See additional user manual!

Chapter 4 Other settings

4.1 Set pinch valve

The milk dispensing temperature is determined by the milk nozzle and by the setting of the pinch valve. For dispensing of the milk foam, the dispensing temperature is only determined by the milk nozzle, not the pinch valve.

- * Press in the pin with a ball pen or something similar
- * Turn the pinch valve by one notch at a time
- * Test at each step

The milk should not spit during dispensing.

Setting for colder milk = turning clockwise



4.2 Labelling of beverage buttons

First switch off coffee machine in order not to trigger dispensing inadvertently.



- * Pull out existing labelling behind front glass in a downward direction.
- * Write on label stickers as desired using the WMF template.
- * Stick on label mount and re-insert behind the front glass panel

Print-out of the template is possible on adhesive labels or paper.

Stick paper to label mount using an adhesive stick.



Free download of WMF template
from www.servicecenter.wmf.de

Matching adhesive labels:
Zweckform-Avery No. 3659

Chapter 5 Customer care

Regular cleaning is essential in order to ensure problem-free operation of the coffee machine and to ensure optimum coffee quality.



Overview of cleaning intervals

Customer care				
Daily	Weekly	Regularly	Automatic	
			x	Foamer rinsing
x				Cleaning program
x				Milk system rinsing
x				Combi spout cleaning (Standard)
	x			Combi spout cleaning (Plug&Clean)*
	x			Choc system rinsing*
x				Coffee grounds container cleaning
x				Drip tray cleaning
(x)	x			Mixer cleaning*
x				Steam outlet cleaning
x				Steampower cleaning*
		x		Bean hopper(s) cleaning
		x		Choc hopper cleaning*



Cleaning program,
Milk system rinsing
Combi spout cleaning
Chocsystem rinsing

See Quick reference cleaning!

 
- Daily = Daily, at least once daily and as required
- Weekly = Weekly cleaning
- Regularly = Regularly as required
- Required = As required
- (x) = Daily as required
- * = Optional (according to model)

5.1 Cleaning program

The cleaning program is guided by software in the following sequence through the whole cleaning program:

- Milk system cleaning
- Choc system rinsing
- Cleaning program for the machine with cleaning tablets: coffee carrying parts

Cleaning program - see "Quick reference cleaning"





5.2 Milk system cleaning

See "Quick reference cleaning" for milk system rinsing. The milk system consists of:

- Combi spout
- Milk nozzle
- Milk hose

The milk system must be thoroughly cleaned at least once a day.

 Milk hose should be changed at regular intervals.

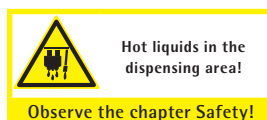

Standard

Cleaning of the combi spout is in three parts

- Automatic foamer rinsing after each beverage with milk or milk foam
- Display guided milk system rinsing
- Daily lay combi spout, milk hose and milk nozzles in a cleaning solution



Milk system rinsing is an integral part of the cleaning program.

Plug&Clean

Cleaning of the Plug&Clean is in two parts:

- Automatic foamer rinsing for a maximum of 3 minutes after each beverage with milk or milk foam
- Display guided milk system rinsing
- Weekly lay combi spout, milk hose and milk nozzles in a cleaning solution

5.3 Choc system rinsing

Choc system rinsing is interim cleaning of the mixer.

See "Quick reference cleaning" for choc system rinsing



The choc system rinsing is an integral part of the cleaning program.

5.4 General cleaning

Grounds container cleaning (grounds chute, optional)

Empty, rinse under running water and clean using a damp cloth.

Drip tray, housing and front panel cleaning:

Clean the cold machine using a damp cloth. Finally wipe dry using a fine woollen cloth or chamois leather.

Metal surfaces cleaning:

For cleaning metal housing parts (matt surface) we recommend WMF Purargan® forte cleaner.

Order numbers for the WMF care program, see annex: Accessories and spare parts

Switch off the machine before cleaning the front panel to avoid a beverage being accidentally dispensed!

Do not clean with scouring powders or similar!
There is a risk of causing scratches or scores.
Do not use any sharp cleaning materials or implements!



5.5 Choc mixer cleaning (optional)

Cleaning will be more/less frequent depending on the powder used!

- * Switch off coffee machine using the ON/OFF button.
- * Pull out mains plug
- * Remove grounds container
- * Pull off mixer hose from mixer to combi spout
- * Turn stud on bayonet fitting underneath the mixer jug counter-clockwise.

The mixer jug is released from the arrester lock.

- * The propeller for the mixer is now visible and can be cleaned with a cloth
- * Dismantle two-piece mixer jug
- * Clean both parts of mixer jug and mixer hosing under warm running water
- * Allow all parts to dry completely

closed



open



On re-assembly all openings must face in the same direction.

 
Ensure that the spiral guide is plugged on and the hose is not pinched.

- * Replace mixer jug
- * Turn stud on bayonet fixing back in a clockwise direction
- * Push mixer hose onto mixer jug fitting again and plug in combi spout
- * Replace grounds container



Ensure that mixer hose is replaced securely.

This is important as otherwise, during the next dispensing, hot water or hot choc may escape.





5.6 Steam outlet cleaning (Standard and Steampower)

- * Mix 5 ml. of cleaner in a tall jug with 0.5 l of lukewarm water
- * Immerse steam nozzle in the cleaning solution and operate shortly


Reaction time: 30 minutes!

- * Clean with a brush
- * Rinse thoroughly with water
- * Press on the steam button

 The steam frees up the holes of the steam nozzle of milk residues and removes cleaner residues.

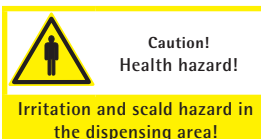

 Do not let the nozzle stand overnight in the cleaning or rinsing solution!!



5.7 Foils for bean hopper cleaning

Clean the inserted foils of the bean hopper as required and at regular intervals (at least once a month).

Only perform cleaning on empty or almost empty bean hoppers!

Never reach into the coffee grinders!

Never clean the foils in a dishwasher.

- * Switch off coffee machine using the ON/OFF button.
- * Pull out mains plug
- * Remove bean hopper cover
- * Remove inserted foils upwards
- * Clean thoroughly using a moist, non-woven cloth
- * Allow the foils to dry completely
- * Insert foil again



Bruising or crushing hazard!

Observe the chapter Safety!



Observe the manual!

Observe the chapter Warranty!

5.8 Cleaning the choc product hopper (optional)

Cleaning will be more/less frequent depending on powder used!

- * Switch off coffee machine using the ON/OFF button
- * Pull out mains plug
- * Unlock hopper lock on the machine cover
- * Tip hopper forwards and remove upwards
- * Empty hopper completely
- * Unscrew union nut at front and rear.
- * Pull out dosing auger
- * Thoroughly wipe out hopper with a damp cloth
- * Thoroughly clean individual dosing auger components
- * Allow hopper and individual components to dry completely
- * Re-assemble and insert the dosing auger and screw on union screws.



Portion controller with individual parts, dosing auger



Ensure correct orientation of discharge!

- * Fill and mount hopper
- * Shut hopper lock on the machine cover



Chapter 6 HACCP cleaning schedule

You are required by law to ensure that your customers are not subject to any health risks as a consequence of consumption of food items you serve.

A HACCP cleaning schedule (Hazard Analysis Critical Control Points) for risk identification and assessment is required. You should carry out a risk analysis on your premises. The aim of the analysis is to recognize and preempt food hygiene hazard points. For this purpose, monitoring and, where necessary, test procedures must be established and implemented.

With correct installation, care, maintenance and cleaning WMF coffee machines meet the requirements described above. If care of the coffee machines is not carried out properly dispensing milk beverages will constitute a food hygiene hazard point.


Please observe the following points in order to comply with the HACCP cleaning schedule:

"Food Hygiene Ordinance from 05.08.1997"

Use our HACCP cleaning schedule for monitoring of regular cleaning.

Sterilize the milk system daily

- Adhere to the cleaning instructions for the milk system contained in the user manual. This will ensure that your system contains a minimum of bacteria at commencement of operation.

You can call up the logs of the most recent cleaning operations via information pad .



Always commence operation with a freshly opened prerrefrigerated milk pack

- Original packaged UHT milk is usually free from harmful bacteria. Always open a new pre-refrigerated pack at commencement of operation.
- Ensure absolute cleanliness on opening the milk pack. Germs can be introduced from dirty hands or tools when opening.

Recommendation:

Only use UHT milk with a 1.5% fat content.

Keep milk cool!

- Always have a new pre-refrigerated milk pack handy.
- If a pre-refrigerated freshly opened pack is used within a period not exceeding 3 hours, refrigeration during use is not necessary.
- If little milk is being used, pre-refrigerated milk must be replaced in the refrigerator again during operation.

At commencement of operation milk should be at approx. 6 - 8 °C.

Depending on the setting, one litre of milk is sufficient for approx. 20 cappuccinos.

WMF AG offers a range of refrigeration options (e.g. WMF countertop coolers or WMF milk coolers).

HACCP Cleaning schedule

Month _____ Year _____

Use only cooled UHT milk as otherwise health risks due to microbacteria cannot be excluded!
For Choc use only products which are not past their sell-by date.

Cleaning steps:

11. Perform Maintenance Mode.
Quick reference "Cleaning".

2a. Cleaning Milk Foamer (combi spout)
Quick reference "Cleaning".

2b. Daily Mixer Cleaning. Customer Care chapter.
- 3a. Foamer Cleaning or change of combi spout after 4 hours operation.
(Absolutely essential with low throughput and with uncooled milk).

3b. Weekly Mixer Cleaning and regular cleaning of product reservoir.
Customer Care chapter

4. General machine cleaning. Customer Care chapter

Date	Cleaning steps						Signature
	Time						
	1	2	3		4		
1.							
2.							
3.							
4.							
5.							
6.							
7.							
8.							
9.							
10.							
11.							
12.							
13.							
14.							
15.							
16.							

Date	Cleaning steps						Signature
	Time						
	1	2	3		4		
17.							
18.							
19.							
20.							
21.							
22.							
23.							
24.							
25.							
26.							
27.							
28.							
29.							
30.							
31.							

Chapter 7 Maintenance

Please observe that this is a professional industrial coffee machine which needs regular maintenance and descaling.

The point in time of maintenance is based on the degree of use of the machine and is shown on the display. If maintenance is undertaken by the WMF Service, then descaling of the brewing system is done at the same.

The coffee machine can continue to be used after the maintenance message, but execution or commissioning of the service work is, however, only to be undertaken to secure the function safety and to avoid subsequent damages in real time.

7.1 Customer Check-up

The Customer Check-up should take place at the latest every 6 months; this can be done by yourself.

7.2 Maintenance

Maintenance must take place every 30,000 brews, at the latest however after 1 year.

7.3 Mixer

Maintenance of the mixer system must take place every 6,000 cycles, at the latest however after 1 year.

7.4 WMF Service.

You can reach the WMF Service via a central centre if the WMF Service is not known locally.



For other maintenance work and repairs please contact your local WMF Service. The telephone number can be found on the address sticker on the coffee machine and on the delivery note.

Chapter 8 Messages and instructions

8.1 Messages for operation

Refill beans

- * Top up bean hopper (refer to display)!
 - * Check whether the coffee beans feed through
- If not:*
- * Stir with a large spoon and confirm with **OK** .



Open water supply!

- * Turn on water mains tap and confirm



 
Empty coffee grounds container!

- * Empty coffee grounds container



No coffee grounds container fitted!

- * Insert the grounds container again correctly



Change filter!

- * Please call the WMF Service
- Observe the user manual for the scale filter!*



Please consult the user manual

Indication of error number
See chapter "Error messages/malfunctions".



Please call the WMF Service !

Indication of error number
See chapter "Error messages/malfunctions".



Service maintenance

- * Please call the WMF Service



8.2 Error messages/malfunctions

Basic procedure on display of error messages:

- * Switch off coffee machine and then switch it on again after a few seconds
- * Repeat the process which led to the error

In many cases the error is rectified by this and you can carry on working.

If this does not work:

Find the error message or error code in the following list and follow the sequence of actions indicated.

If this does not rectify the error or if the error number is not listed please call the WMF Service !

Some messages lead to blocking of individual functions. You will notice this by the fact that the beverage button light goes out. The beverage buttons that are still illuminated can continue to be used.

Your WMF bistro! is provided with a diagnostics program. Any errors occurring are shown on the display. The errors listed may also be caused by an interruption to the mains electricity supply.

If there is a current error or a message to the operator, pad



is displayed.



- * Touch

Error number is displayed.

Error number	Error description	Action instruction
Grinders		
24	Motor blocked	<i>All associated brews barred. Note hopper switchover!</i> * Tap on beans hopper <i>The beans may slide down and the light barrier is touched.</i>
34	Motor blocked	<i>All associated brews barred. Note hopper switchover!</i> * Tap on beans hopper <i>The beans may slide down and the light barrier is touched.</i>
Steam boiler		
186	Steam boiler filling time	<i>Steam dispensing barred, milk foam barred.</i> * Machine Off-On; note heating display for information for the WMF Service ! * Water tap open?
189	Heating time of the steam boiler	<i>Heating off, steam dispensing barred.</i> * Machine Off-On * Check local fuses
Sensor system (current)		
130	General current error	* Machine Off-On * Switch off lighting (>adjust), all colours to zero * Allow the machine to cool off and try again * Call the WMF Service if the error occurs again
148	Current error on the steam boiler vent valve	<i>One can continue to use the machine; dosing fluctuations can occur for milk meterings.</i> * Confirm steam dispensing or milk dispensing from time to time * Call the WMF Service
131	Power supply error on the hot water valve	<i>The hot water dispensing is barred: One can continue to use the machine. Do not use hot water anymore.</i> * Call the WMF Service
132	Current error on cold water mixing valve, hot water valve	<i>Hot water dispensing is barred: One can continue to use the machine. Do not use hot water anymore.</i> * Call the WMF Service
137	Current error on mixer/valve	<i>Barr on beverage mixer: One can continue to use the machine. Do not use choc anymore.</i> * Call the WMF Service
140	Current error on steam valve 1	<i>Steam dispensing is barred: One can continue to use the machine. Do not use steam dispensing or Steampower.</i> * Call the WMF Service
141	Power supply error on steam valve 2	<i>Steam dispensing is barred: One can continue to use the machine. Do not use steam dispensing or Steampower.</i> * Call the WMF Service

Error number	Error description	Action instruction
142	Power supply error on the cap. valve 1	<i>Milk beverages are barred: The machine can be used except for milk beverages. If installed use steam dispensing for foaming.</i> * Call the WMF Service
143	Power supply error on the cap. valve 2	<i>Milk beverages are barred: The machine can be used except for milk beverages. If installed use steam dispensing for foaming.</i> * Call the WMF Service
134	Power supply error on brewing valve for cold water	<i>One can continue to use the machine. Coffee beverages may be brewed too hot.</i> * Call the WMF Service
149	General power supply error	* Machine Off-On * Allow the machine to cool off and try again If the error occurs again: * Call the WMF Service
161	Flow error	* Water tap opened! * Machine Off-On * Perform cleaning and try again

8.3 Error without error display

Error pattern	Action instruction
<ul style="list-style-type: none"> Coffee dispensing on the left/right differs 	<ul style="list-style-type: none"> * Clean the combi spout <i>See "Quick reference cleaning".</i>
<ul style="list-style-type: none"> No milk foam/no milk dispensing, although there is milk in the hopper 	<ul style="list-style-type: none"> * Check whether the milk hose is kinked or squashed * Lay milk hose correctly * Clean the combi spout * Milk nozzle blocked? <i>See "Quick reference cleaning".</i> * Pinch valve turned to strongly? <i>See chapter "Other settings".</i>
<ul style="list-style-type: none"> Milk foam not OK, temperature too low 	<ul style="list-style-type: none"> * Change milk nozzle: <ul style="list-style-type: none"> - green milk nozzle for use of cooled milk - white or brown milk nozzle for uncooled milk * Clean the combi spout <i>See "Quick reference cleaning".</i> * Close pinch valve <i>See chapter "Other settings".</i>
<ul style="list-style-type: none"> The milk foam dispensing spits strongly Milk too hot 	<ul style="list-style-type: none"> * Use white or brown milk nozzle * Set foam quality lower * Clean milk cleaning system <i>See "Quick reference cleaning".</i> * Open pinch valve <i>See chapter "Other settings".</i>
<ul style="list-style-type: none"> No illumination No display No tone when pressing a button 	<ul style="list-style-type: none"> * Pull out drip tray * Check the fuse behind the drip tray * Pull out mains plug! * Replace fuse <i>Only fuse F4A is permissible!</i> <div style="border: 2px solid orange; padding: 10px; text-align: center;">  <p>Risk of electrocution!</p> <p>Risk to life if not observed!</p> </div>

Chapter 9 Safety

9.1 Hazard to the operator

At WMF, safety is one of the most essential product features. The effectiveness of safety devices can only be ensured if the following points are observed:

- Read the user manuals carefully prior to use.
- Do not touch hot machine components.
- Do not use the machine if it is not working properly or if it is damaged.
- Built-in safety devices must never be altered.
- This device is not designed for persons (including children) with limited physical, sensory or mental capabilities or who lack the required experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them about how the device should be used.
- Children should be supervised to ensure that they do not play with the machine.

Despite safety devices, every machine remains fraught with hazards if incorrectly used. Please observe the following instructions when using the coffee machine so as to prevent injury and health hazards:

Scald hazard!

When dispensing coffee, hot water and steam there is hazard of scalding. Ensure that there is always a receptacle under the outlet when dispensing drinks.

Bruising or crushing hazard!

There is a hazard of bruising or crushing when handling all moving parts! Do not reach into the bean hopper or the brewing unit opening when the coffee machine is switched on.



Failure to observe hazard instructions can lead to serious injury.



Hot liquids in the dispensing area!

Scald hazard!



Caution!
Hot Steam!

Burn hazard!



Bruising or crushing hazard!

Hazard of being injured!

Health hazard!


The product container (coffee beans) and manual insert may only be filled with materials for the use intended!

**Health hazard!**

When handling special cleaners for the milk foamer and cleaning tablets, please observe the protective measures on the packaging. The special cleaners for the milk foamer and cleaning tablets are irritants. Only put in cleaning tablets after instructions to do so are shown on the display.

**Irritation and scald hazard!**

Never reach under the spouts while cleaning!
Cleaning fluid runs out of the combi spout when cleaning.

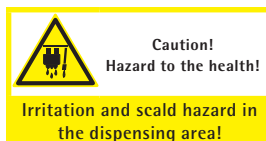

9.2 Hazard to the coffee machine

Please observe the following points so as to prevent problems with and damage to the coffee machine:

- For water with a carbonate hardness in excess of 5°dKH, a WMF anti-scale filter must be fitted otherwise the coffee machine can be damaged due to build-up of scale.
- For insurance reasons always ensure that, at the end of operation, the mains water tap for the water supply is turned off and the mains power is switched off or the machine is unplugged.
- We recommend damage prevention measures:
 - e.g. installation of a suitable water monitor in the mains water supply
 - installing smoke detectors.

- After a company holiday we recommend running the cleaning mode at least twice before reusing the machine.
- Do not expose the coffee machine to frost.
- This machine is not for use outdoors, do not spray the machine with water. The maximum relative humidity should not exceed 80%; do not allow dewing.
- Do not use a water hose, steam jets, steam cleaners or the like to clean the device.
- The device must be set on a flat, level and secure surface.



See Quick reference cleaning

9.3 Duties of the owner/operator

The coffee machine fulfils the requirements of the EU Low Voltage Directive LVD (2006/95/EU) and the EMC Directive EMC (2004/108/EU) and carries the CE symbol.

The pressure containers are not subject to the EC PED Directive (see Article 1 Paragraph 3.6) since they conform with Article 3 Paragraph 3 of the PED. The hot water/steam boiler is neither notifiable and does not require approval. Calculations conform to AD 2000. Every device was subjected to a pressure test.

Currently valid national rules apply on countries outside of the European Union. The operator of such equipment must ensure regular maintenance by WMF Service technicians, their agents or other authorised persons and checking of safety devices.

The operator shall ensure that electrical equipment and operating facilities are in a fit state (e.g. to BGV A3) [German Accident Prevention Association or equivalent].

In order to secure the operating safety of your coffee machine it is essential, amongst other things, to perform regular checking of safety valve(s) and the pressure containers(s). These measures are conducted by the WMF Service or by WMF authorised service personnel as part of the maintenance work.

The manufacturer's specifications regarding maintenance cycles and frequency of maintenance (see chapter "Maintenance") are to be observed.

This device is subject to the directive on waste electrical and electronic equipment (WEEE /EU directive) and may not be disposed of as domestic waste.



For disposal please approach the WMF Service.

9.4 Warranty claims

During the warranty period of 12 months from transfer of risk, the purchaser has statutory warranty entitlements. WMF should always be afforded the opportunity to rectify errors within an appropriate period.

Claims above and beyond the above, in particular damage claims as a result of consequential damage are excluded, to the extent that this is legally permissible.

Material defects shall be reported to WMF immediately and in writing.

Warranty period 12 months

No warranty is provided:

- In respect of all parts subject to natural wear and tear. This includes, inter alia, seals, mixers and brewing unit.
- In respect of errors due to the effect of the weather, scale build-up, chemical, electrochemical or electrical effects, unless attributable to a fault on the part of WMF.

- If a scale filter is not fitted even though the local water supply requires use of a scale filter and if faults occur as a consequence.
- In respect of faults which occur as a result of failure to follow handling instructions and regulations, maintenance and care of the unit (e.g. user manuals and maintenance instructions).
- In respect of faults which occur as the result of failure to use original WMF replacement parts or incorrect assembly by the purchaser or by third parties or by faulty or negligent treatment.
- In respect of the consequences of improper modifications undertaken without our consent or by repair or reconditioning work on the part of the purchaser or by third parties.
- In respect of faults caused by inappropriate or improper use.
- Inappropriate use of the coffee machine shall be deemed to have taken place if the customer exceeds the annual number of coffee or choc mixer servings prescribed within the 12 month warranty period (from the date of purchase). Annual maximum volume is 60,000 coffee servings and a maximum of 6,000 Choc drinks.
- The highest amounts are permissible for regular performance of maintenance work according to the chapter "Maintenance and Descaling".



The customer is advised in the order confirmation whether or not use of a scale filter is required.



see chapter Maintenance

Annex A: Quick reference “cleaning”










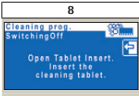

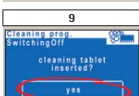
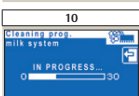
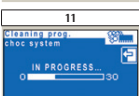

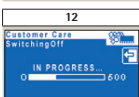

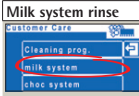
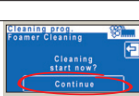
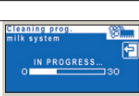
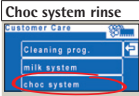
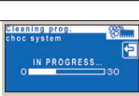
Quick Reference “Cleaning”

Please refer to WMF presto User Manual.

Consider the Overview of Cleaning Interval Schedule in chapter “Customer care” in the User Manual.
Prior to the first cleaning read the User Manual, Customer Care chapter.



Cleaning Program Standard

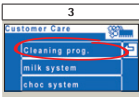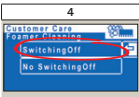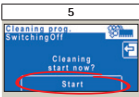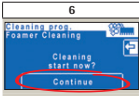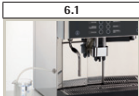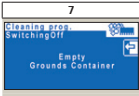1  * Touch MENU pad	2  * Touch Cleaning prog. (Customer Care)	3  * Touch Cleaning prog.	4  * Touch switching off	5  * Touch Start Cleaning program sequence starts.
6  * Provide 0.5 l of clear, cold water in a receptacle * Insert milk hose * Touch Continue	6.1  * Empty the grounds container	7  * Empty the grounds container	7.1  * Open the manual insert * Insert a cleaning tablet	8  * Open the manual insert * Insert a cleaning tablet
8.1  Machine cleaning starts. Duration approx. 8 mins.	9  * Close the manual insert * Touch Yes	10  Milk system rinse starts Duration approx. 30 secs.	11  The choc system rinse starts Duration approx. 30 secs.	11.1  The choc system rinse starts Duration approx. 30 secs.
12  Machine cleaning starts. Duration approx. 8 mins.	12.1  Machine cleaning starts. Duration approx. 8 mins.	Step 6 and 10: Only after dispensing of milk beverages.	Step 11: Only after dispensing of choc beverages (with optional mixer system).	
Milk system rinse  * Touch on Milk system on submenu * Touch on Start	 * Provide 0.5 l of clear, cold water in a receptacle * Insert milk hose * Touch Start	 Milk system rinse starts Duration approx. 30 secs.	Choc system rinse  * Touch on choc system on submenu * Touch on Start	 The choc rinse starts Duration approx. 30 secs.



33 2413 0010 1.0 06.2007

Cleaning program Plug&Clean

1 * Touch MENUE pad	2 * Touch PIN (Customer Care)	3 * Touch Cleaning prog.	4 * Touch switching off	5 * Touch Start Cleaning program sequence starts.
6 * Empty the grounds container	6.1 	7 * Open the manual insert * Insert a cleaning tablet	8 * Plug the connection of the milk hose onto the Plug&Clean adapter. Touch Continue	8.1
9 The Plug&Clean Cleaning starts. Duration approx. 30 secs.	10 The Choc system rinsing starts. Duration approx. 30 secs.	10.1 	11 The machine cleaning starts. Duration approx. 8 mins.	11.1

Step 8-9: Only after dispensing of milk beverages.

Step 10: Only after dispensing of choc beverages (with optional mixer system).

Manual combi spout cleaning Prior to cleaning switch off at ON/OFF button. Pull out mains plug!

A 	* Pull forward the lever behind the combi spout. * Remove combi spout * Remove milk hose from milk container and release from combi spout. * If a mixer hose is fitted remove it too.	B 	* Mix 5 ml cleaner with 0.5 l warm water in a receptacle. * Dismantle combi spout * Soak parts of combi spout together with milk hose in the cleaning solution All parts must be completely immersed. * After 5 hours clean all parts thoroughly with a brush.
C 	* Rinse combi spout and milk hose very thoroughly with clear water so that no cleaner fluid remains * Reassemble combi spout * Replace combi spout * Replace milk hose and mixer hose		

Machines with pinch valve: remove milk hose. Replace in reverse order.

1 	2 * Pull forwards with both hands.	2.1 	3 * Remove upwards from the pinch valve.	3.1
--------------	--	----------------	--	----------------

Annex B: Technical data

Technical data coffee machine

Nominal power rating *	3.3 kW	6.3 kW
Output per hour**	300 Espressos 200 Cappuccinos 200 Café Crèmes 120 Coffees*** 120 Chocs****	300 Espressos 220 Cappuccinos 220 Café Crèmes 120 Coffees*** 120 Chocs****
Overall hot water output	24 l/h	48 l/h
Coffee bean hopper	1,000 g per load	
Choc hopper	500 - 1000 g per load, depending on the choc powder	
Mains power connection *	1/N/PE 50/60 Hz 220-230 V	3/N/PE 50/60 Hz 380-400 V
External dimensions	width 450 mm height 733 mm (with bean hopper) depth 555 mm	
Empty weight	about 80 kg	
Continuous sound pressure level (Lpa) *****	< 70 dB (A)	

We reserve the right to make technical modifications!

- * For special models see model label, values given above are for the basic model.
- ** The outputs per hour are STANDARD VALUES which can be dependent upon the following factors: Ground coffee quantity, type of coffee, grinding degree, brewing temperature, brewing blend Ø, brewing pressure, water hardness and the general operating condition of the machine (i.e. scaling, connection conditions, electrical power, drinking water, drainage, wear etc.)
- *** Only for model version ECF
- **** Only with the optional choc
- ***** The A-evaluated sound pressure level Lpa (slow) and Lpa (impulses) at the operating personnel workplace are under 70 dB(A) in any working mode.

Conditions for usage and installation

Necessary preparatory work at the customers premises are to be arranged by the machine owner/operator himself. The work must be carried out by authorised installation engineers in compliance with general, as well as local, regulations. The WMF Service technicians may only connect the machine to existing prepared connection points. The WMF Service technicians are neither authorised nor responsible for carrying out any work prior to connection!

Mains voltage tolerance range	230 V + 6 % - 10 %, mains voltage interruption < 50 ms no interruption of function
Water supply	3/8 inch flexihose connector with mains tap and filter on customer supply side, water temperature max. 35°C. min. 0.2 MPa min. of a 0.2 MPa flow pressure at 2 l/min., max. 0.6 MPa
Water quality	For drinking water with a carbonate hardness above 5° dKH a WMF scale filter should be installed upstream.
Water drain pipe (optional)	Hose a min. DN 19, minimum downward slope of 2 cm/m
Ambient temperature	+ 5°C to max. of + 35°C (empty the water line in case of frost).
Maximum humidity	80% relative humidity without condensation, no water spray, do not use unit outdoors!
Protection	IP X0
Inbuilt clearances	For operating, service and safety reasons the machine should be installed with a clearance of not less than 50mm at the back and sides from the building or non-WMF components. A clear height of 100 mm from the top of the supporting surface should be ensured. Recommended height of the working surface is a minimum of 850 mm from floor level . If the machine connections should be passed downwards through the counter please make space for the lines which can reduce the usable space below the machine.
Installation dimensions of the scale filter:	Maximum diameter of 270 mm, height 670 mm additional space needed for connecting hoses

These specifications for the electrical connection and the standards quoted apply for connecting the machine in EU states. It may be necessary to also observe additional specific national regulations. Outside the EU states acceptance of the standards quoted is to be checked by the legal or natural person who wishes to use the machine.

The local electrical plant must be constructed according to IEC 364. To improve safety, the coffee machine should be fitted with an FI 30 mA earth leakage current circuit breaker complying with EN 61008. Near the machine or about 30 cm below the counter top there should be a shockproof socket as a single-phase connection installed locally on the rear or side wall of the counter substructure or a nation-specific single-phase socket and, in the case of a 3-phase connection, a 5-pin CEE/CEKON-socket according to EN 60309 or a nation-specific multi-pin socket. If the mains connection lead for this coffee machine is damaged then it must be replaced by our customer service personnel or a similarly qualified person. If the coffee machine is permanently connected to the mains then an all-pole disconnecting separator (mains switch) according to EN 60947 with a minimum 3 mm contact gap must be installed. A separator switch is recommended for a flexible connection. The mains cable must not come into contact with hot surfaces. The mains switch and plug top are part of the customer's on-site installation. The machine may not be fitted with a fixed permanent mains connection if installed on a transporting trolley (a mobile station).

In order to avoid possible faults from arising on our screened data lines due to potential equalization currents between the devices, an additional potential equalization unit should be planned for devices connected to the accounting system. (See EN 60309)

Annex C: Accessories and spare parts

Number	Unit	Designation	Order number	Position number	Fitting
Combi spout complete with Choc					
1	pc	Combi spout Standard (complete)	33 2259 8000	10	all
1	pc	Combi spout Milkpower (complete)	33 2259 8100	10	all
1	pc	Combi spout addition Choc	33 2296 2000	10	Choc
	meter	Milk hose	00 0048 4948	10	fresh milk
1	pc	Milk nozzle for cold milk (green)	33 2317 8000	10	fresh milk
1	pc	Milk nozzle for warm milk (white)	33 9516 9000	10	fresh milk
1	pc	Milk nozzle for warm milk (brown)	33 2031 5100	10	fresh milk
1	pc	Milk nozzle für Milkpower (blue)	33 1384 3100	10	fresh milk
	meter	Mixer hose		10	Choc
1	pc	Mixer bowl		10	Choc
Cup&Cool width 36 cm					
1	pc	Adapter Plug & Clean	33 2355 7000		fresh milk
1	pc	Milk container 350	33.2418.4000		fresh milk
1	pc	Milk container lid 350	33.2388.8000		fresh milk
Cup&Cool width 27 cm					
1	pc	Adapter Plug & Clean	33 2355 7000		fresh milk
1	pc	Milk container	33 2388 6000		fresh milk
1	pc	Milk container lid	33 2388 7000		fresh milk
Documentation/instructions					
1	pc	Set of documents: • User manual bistro! • Quick reference „Cleaning“	33 2413 0000		all
Bean hopper (complete)					
1	pc	Foil bean hopper	33 2813 8000	1	all
1	pc	Bean hopper lid	33 9500 0200	1	all
1	pc	Bean hopper lid, lockable	33 2809 7000	1	
1	pc	Spare key	33 2071 8100	2	Choc

Number	Unit	Designation	Order number	Position number	Fitting
Choc hopper					
1	pc	Choc hopper	33 2801 5099	2	Choc
1	pc	Choc hopper lid	33 9508 0100	2	Choc
1	pc	Choc hopper lid, lockable	33 2809 8000	2	Choc
1	pc	Spare key	33 2071 8100	2	Choc
1	sheet	Labels for choc container	33 2315 3000	2	Choc
Coffee grounds container					
1	pc	Coffee grounds container (mit Designblech)	33 2800 3000	15	
1	pc	Grounds disposal through the counter (mit Designblech)	33 2800 3100	15	
Drip tray / drip tray grid					
1	pc	Drip tray	33 2372 3000	16	all
1	pc	Drip tray grid	33 2372 4000	16	all
Fuse					
1	pc	Fuse F4	33 0330 0000		all
1	pc	Fuse holder lid	33 1597 0000		all
Customer service-kit 0.5/15.000					
1	pc	Customer service-kit 0.5/15.000	33 2809 6000		all
Order numbers for the WMF Care program:					
1	bottle	WMF Special cleaner for milkfoamer	33 0683 6000		fresh milk
1	box	WMF Special cleaning tablets (box with 100pc)	33 0681 1000		all
1	pc	Pipe cleaner	33 0350 0000		all
1	pc	Cleaning brush	33 1521 9000		all
1	tube	Valve lubricating and sealing grease Molykote 5 gr.	33 2179 9000		all

Index

A

Access control 33
Accessories and spare parts 60
Accounting: numbers of items 35
Accounting level 34
Adjustable addition ingredients 29

B

Barista pad 19, 32
Bean hopper 14
Bean hopper(s) 7
Beverage buttons 27
Beverage dispensing 10
Brewing temperature 28
Brewing time 20
Button allocation 29

C

Calling up the main menu 8
Capacity 31
Change recipes 27
Characters and symbols used in the user manual 8
Choc powder quantity 27
Chocsystem 26
Claims under warranty 54
Cleaning 20
Cleaning, Drip tray, housing and front panel 39
Cleaning of grounds container 39
Cleaning program 25, 38
Cleaning the bean hopper 41
Cleaning the mixer 39
Cleaning the product hopper 42
Cleaning the steam outlet 40
Coffee grounds container 15
Coffee with coffee grounds 15
Conditions for usage and installation 58
Connection to an electrical power source 59
Cool milk 12, 44
Copy Day 23
Cup volumes 27
Customer Care 20, 25, 37

D

Daily cleaning 38
Danger for the coffee machine 52
Danger for the operator 51
Delete counter 35
Delete PIN 34
Delete the timer data 24
Designation of coffee machine parts 6
Diagnostic program 47
Dispensing hot water 11
Dispensing milk foam 11
Dispensing milk or milk foam 11
Dispensing option 29
Display switching times 23

Dosing auger 42
Drip tray 16
Duties of the owner/operator 53

E

Empty coffee grounds container. 46
Error list 47
Error message 17, 47
Error number 46, 47
Error on the brewer 46
Error without a fault display 50

F

Filter change 26
Foamer rinsing 31
Foaming milk 14
Foam milk 13
Functions main menu 18

G

General cleaning 39
Glossary 8
Ground coffee quantity 27
Grounds container not fitted 46

H

HACCP cleaning concept 43
Heat milk 14
Height adjustment combi spout 14

I

Information 17, 20
Ingredients 29
Instructions 46
Introduction 6

L

Labelling beverage buttons 36
Language display guide 30
Latte macchiato 21
Level: Cleaning 33
Level: setting 33
Log 20

M

Main menu 17, 21
Maintenance 20
Malfunctions 47
Manual insert 7, 15
Measures to avoid causing damage 52
Menu control pads 18
Messages and instructions 46
Messages for operation 46
Metal surfaces cleaning 39

Milk and foam 21
 Milk foam quality 21
 Milk foam volume 27
 Milk system 26
 Milk system rinsing 38
 Milk volume 27
 Mixer rinsing 39
 Multiple dispensing 10

N

Numbers of items 35

O

ON/OFF button 32
 Open water tap! 46
 Operating options 31, 32
 Operation 10
 Other settings 36
 Overview of cleaning intervals 37
 Overview of quick reference guides 56

P

Pads on the readiness state display 17
 Pause time for latte macchiato 21
 PIN entry 33
 PIN rights 33
 Preselection 10
 Product hopper 14

Q

Quality check 30
 Quality level 28
 Quick reference guides 56

R

Read counter 35
 Readiness to operate 17, 19
 Recipes and beverages buttons 27
 Recorded errors and messages 20
 Refill with beans 46
 Reset 30
 Rinsing interval 31

S

Safety equipment 51
 SB operation 31
 Scale filter 55
 Scale filter installed 30
 Second level 32
 Select grinder 29
 Self-service 19, 31, 32
 Sequence of adding the ingredients 29
 Service 20
 Servicing 45
 Set sequence 29

Set timer 22
 Setting 27
 Shift key 11, 32
 Software 17
 Steam dispensing 13
 Steampower 14
 Sterilize milk system 43
 Switching off time 22, 23
 Switching on time 22, 23
 Switch on coffee machine 10
 Symbols used in the user manual 8

T

Tablet insert 7
 Technical data 58
 Testing 30
 Time and date 30
 Timer 20, 22
 Timer information 24
 Timer overview 24
 Timer program 22
 Timer status 22
 Touch-screen display 7

V

Volume preselection 10

W

Waiter accounting system 35
 Warm-up rinsing 31
 Warm beverages 13
 Warm rinse button 31
 Warm rinse pad 32
 Warm rinsing 17, 19
 Warranty 54
 Weigh grounds 30
 WMF original spare parts 55
 WMF Service 45



Your nearest WMF Service Centre:

© 2007 WMF AG
Coffee Machines Division
Postfach 1401, D-73309 Geislingen/Steige, Germany.

All rights reserved, in particular duplication, distribution and translation rights.
No part of this Manual may be reproduced in any form or processed, duplicated or distributed using electronic systems without written consent.

Design and production/typesetting and print presentation:
TecDoc GmbH; Geislingen, info@tecdocgmbh.de
Printed in Germany.

Subject to technical modification.

26.07.2007

bistro!